



SONOMA FORGE BROWNSTONE KITCHEN INSTALLATION INSTRUCTIONS

**IN ORDER TO INSTALL THIS FAUCET CORRECTLY, THE INSTALLER
MUST FOLLOW THE STEPS SHOWN ON THE FOLLOWING PAGES**

PAGE 2 - Shows a completely assembled faucet as received by installer.

PAGE 3 - Shows The Harness Assembly which is installed below the counter.

PAGE 4 - Shows the faucet being taken apart following the letters "A" thru "F".

BEGIN INSTALLATION: USING PAGE #3 AS REFERENCE

1. Begin by unscrewing "hot" and "cold" **Caps (A)**. If more pressure is required to loosen cap, use a light rubber pad or glove and take care not to damage finish.
2. Use a Phillips head screwdriver to remove inner **Screws (B)**.
3. Lift off **Handles (C)**.
4. Unscrew **Union assembly nuts (D)** from bottom assembly.

Note: At this point the "Harness" Lower section as shown in Step #3 will separate from the upper decorative trim section.

5. Next, remove the sandwich nuts from the upper section.
6. Drop faucet through pre-drilled 1-1/4" holes in countertop and secure by re-installing bottom sandwich nuts.


The lower section is now ready to re-assemble into the upper as shown on Page 2.

7. Tighten **Screws (B)** securely.
8. Connect or seal **Point (F)** with Handshower Hose or Cap Nut.
9. Now, hook up **Waterways (E)** as required to complete the installation procedure.



ASSEMBLED VIEW


PAGE 2 OF 4

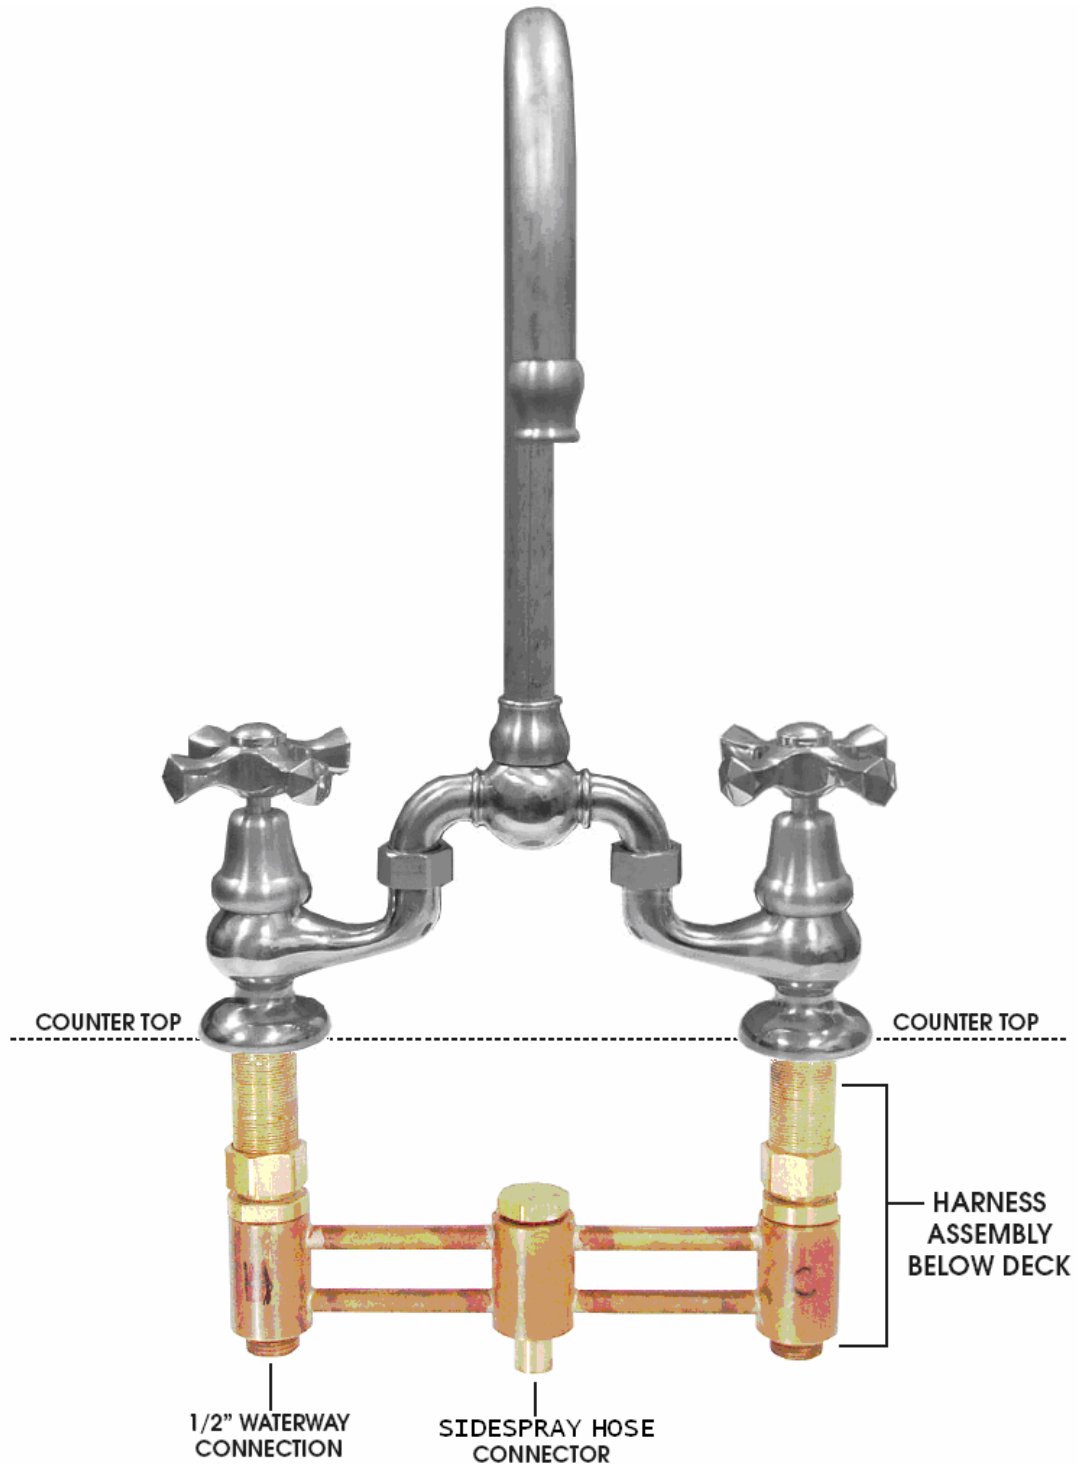



BOTTOM ASSEMBLY VIEW PAGE 3 OF 4

DRILL 1-1/4" HOLE
IN COUNTER TOP
FOR HOT AND COLD VALVES

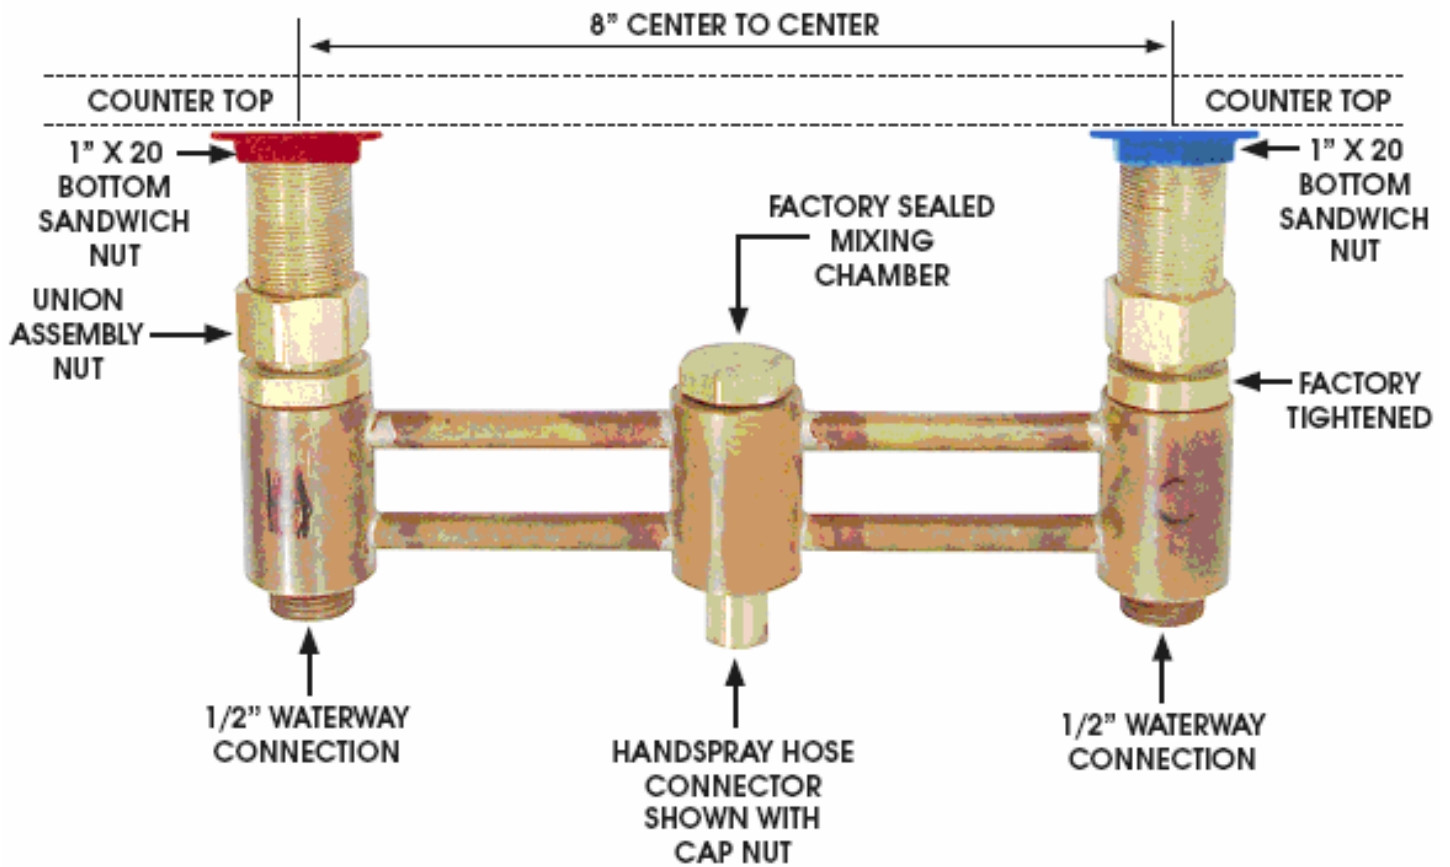



EXPLODED VIEW PAGE 4 OF 4

