

## **INSTALLATION DETAILS**

# Strap Deck Mounted Lavatory Faucet ST-LAV-DM

March 2015





### **Lavatory Spout Installation**

1. Remove 3-Way Tee, Mounting Nut, Mounting Washer and Base Flange from the Mounting Shank as shown in **FIG 1**.

**Note:** Make sure not to remove the Teflon Washer from the 3-Way Tee or the O-ring from the Base Flange.

- 2. Insert spout assembly through 1-1/4" hole in deck with Base Flange in place, then install mounting hardware in order shown in **FIG 2**.
- 3. Tighten Mounting Hardware and 3-Way Tee underneath deck so Spout Assembly is secure and the 3-Way Tee is water tight.

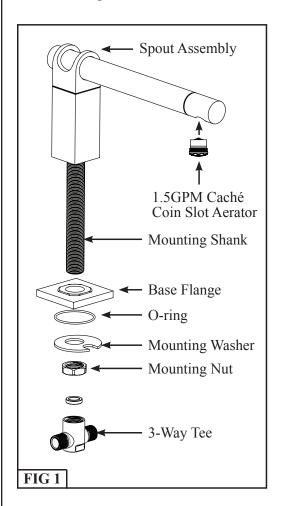

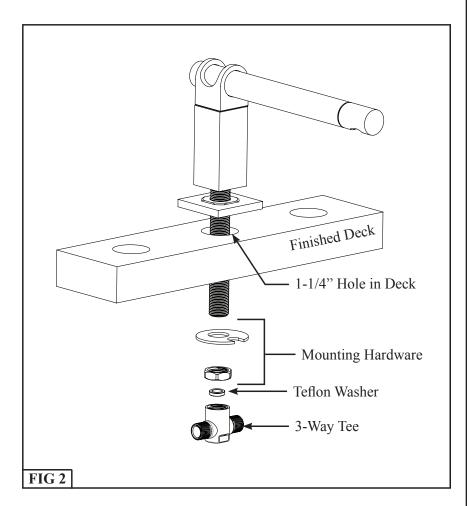

## SONOMA SONOMA FORGE

### **INSTALLATION DETAILS**

# Strap Deck Mounted Lavatory Faucet ST-LAV-DM

March 2015

#### Handle and Valve Installation

Step 1: Install the Valves with the Stem protruding 1-1/2" above the finished deck through the 1-1/4" hole while using the flange, 2 washers and locking nut as your top mounting gear. See FIG 3

*Note*: The 2 washers should sit inside of the round inset in the flange and protrude just above the top of the flange.

Step 2: Install the Strap assembly onto the valve stem and thread the Top Screw onto the Valve. See FIG 4.

*Note*: The Strap assembly should rest on the washers installed in step 1.

Step 3: Install the lever by inserting the lever into the strap and locking the lever into place with the back cap nut. See FIG 5.

*Note*: The Lever Assemblies have 2 Pins that line up with Notches in the Strap to prevent the Lever from rotating.

- **Step 4**: Tighten the Mounting Nut securely under Deck so Valve is firmly in place and does not rotate.
- **Step 5**: Connect Valves to the 3-Way Tee using supplied Hoses. See **FIG 6**.
- **Step 6**: Test system for leaks to complete the installation.

